

Optional Accessories Installation Table

Model	Poles	AL	AX	SHT or UVT	AL+AX	AL+ SHT or UVT	AX+ SHT or UVT	AL+AX+ SHT or UVT
BM30-SN BM50-CN BM60-SN/HN BM100-SN/MN	3P 4P							—
BL50-SN	3P 4P			 (#1.)	—	—	—	—
BM60-HBN BM100-HN BM125-SN/HN	3P 4P			 (3P) (4P)		 (3P) (4P)	 (3P) (4P)	—
BL100-SN BL100-HN	3P 4P			 No UVT for 3P	—	 (#2.)	 (#2.)	—
BM100-H/HC/HS BM160-HB/HC/HS BM250-HB/HC/HS	3P 4P			 (#1.)		 (#1.)	 (#1.)	—
BM100-HBN BM160-SN/HN BM250-SN/HN	3P 4P							
BL160-SN BL250-SN/ CN	3P 4P				—	—	—	—
BM400-SN/HN/CN/ RN/UN	3P 4P				 AX can be installed in AL position			
BL400-SN/HN/RN/UN	3P 4P				 AX can be installed in AL position			—
BM630-SN/HN/CN/ RN/UN BM800-CN/SN/ HN/RN	3P 4P				 AX can be installed in AL position			 AX can be installed in AL position
BL630-HN/RN/UN BL800-SN/HN/RN	3P 4P							
BM1000-HS BM1200-HS BM1600-HS	3P				—			—

■ **AL: Alarm Switch / AX: Auxiliary Switch / SHT: Shunt Trip / UVT: Under Voltage Trip**

Note:

- Standard: AL and AX are installed on left side, SHT and UVT are installed on right side.
- SHT is equipped with coil anti-burn switch.
- BL series can not do right side installation.
- UVT of BM30-SN~BM100-HN can not install on its left side.
- #1 means have no UVT.
- #2 means only can apply to 4P breakers.

● : AL
○ : AX
■ : SHT or UVT

